



ALTEC PRODUCTS, INC.
14050 Lincoln St. NE
Suite 200
Ham Lake, MN 55304
(763) 785-9035
FAX (763) 785-9084
www.altecproducts.com


Autocross Custom - Fit Splash Guards

Installation Instructions

Altec flares accent body lines and protect lower fenders from dirt and stone damage.

These general installation instructions, apply to the model auto specified on the package label. See back for special notes on specific models.

Installation is simple however for best results have a helper assist in aligning guards and drilling holes.

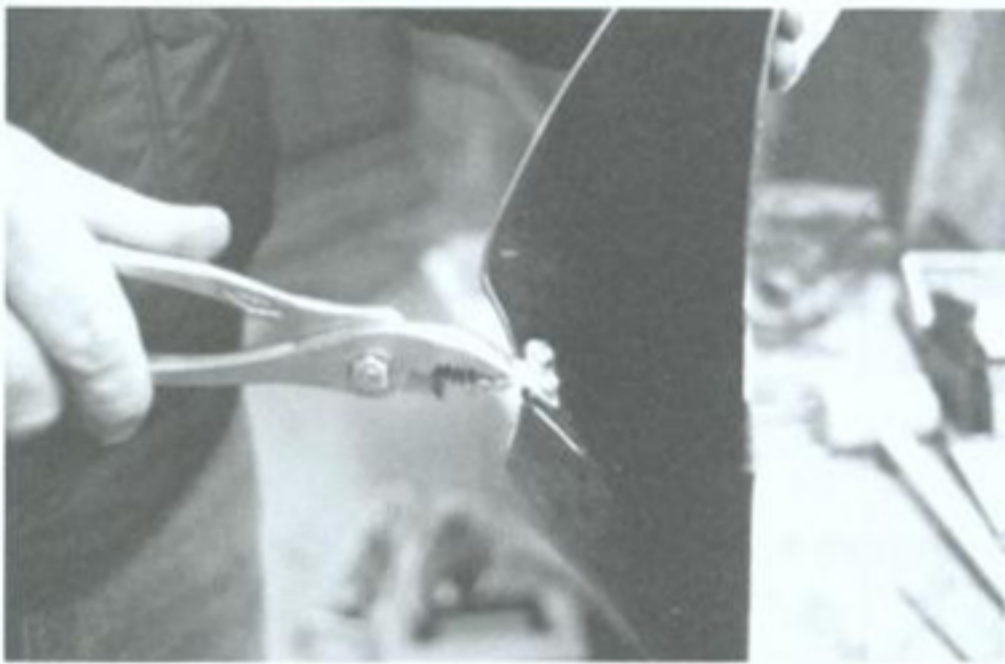


STEP 1

Install mounting tab on each flare using 3/8" phillips machine screws and kep nuts. Bend tab so it will lie flat on fender surface.



STEP 2

Note proper alignment of flare making sure it is square with the car. Use a rough file to make any notches required to clear non std. trim such as fender well chrome trim.

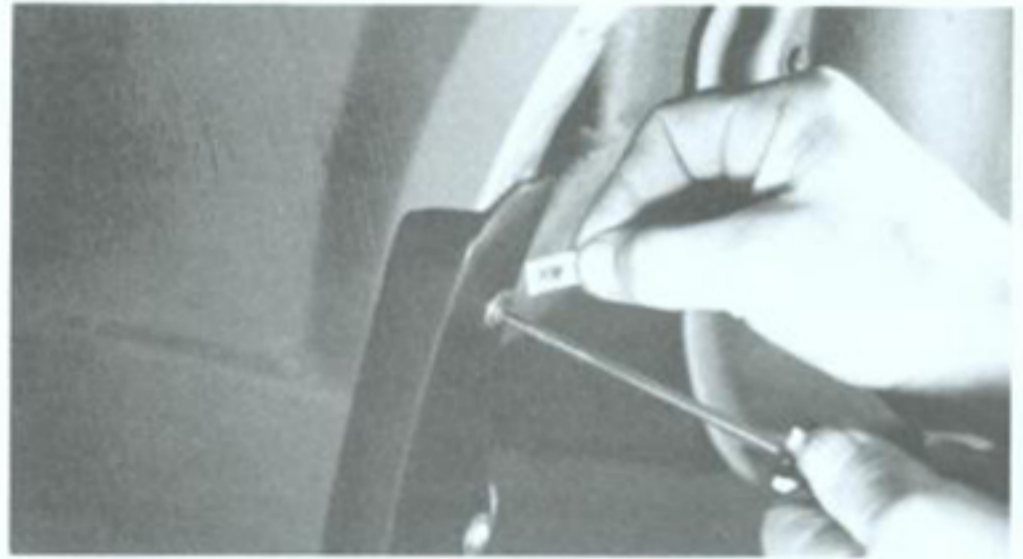

STEP 3

Remove tire if necessary and fasten the guard where any existing wheel well holes line up with flare holes using metal screws and clip nuts.



STEP 4

Drill remaining wheel well and bottom fender holes using a 9/64 in. bit. Install remaining self tapping sheet metal screws.

LIMITED WARRANTY

Components are warranted for 30 days from initial sale to be free of manufacturing defects. Faulty components should be returned for replacement. Damage due to misuse or abuse are not covered.