



ALTEC PRODUCTS INC.

14050 Lincoln St. NE
Suite 200
Ham Lake, MN 55304
(763) 785-9035
Fax (763) 785-9084
www.altecproducts.com

03-ON CORVETTE REAR WINDOW TRIM

(Also fits 02 models w/out interior defrost connection wire)

Installation Instructions

PATENT PENDING

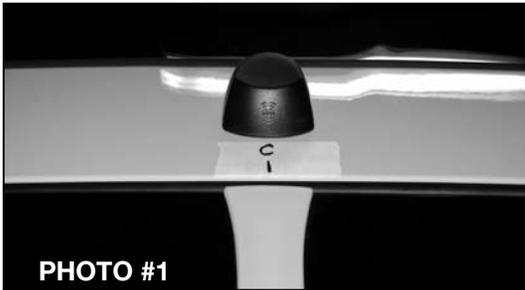


PHOTO #1

1. Installation of the rear window trim is straight forward. For best results have a helper for assistance.
2. Clean rear window inside and out. A quality glass cleaner like Sparkle will assure a streak free, clean surface. Prior to installation use the supplied alcohol pad on area of window glass where trim piece will mount.

3. Place a piece of masking tape at approximate center of glass at top location (SEE PHOTO #1). Place masking tape on roof edge, not glass. Also, use masking tape to extend roof style line on left and right of center. This masking tape will give you a reference point for measuring. Mark centerline on masking tape at center top location (SEE PHOTO #2).

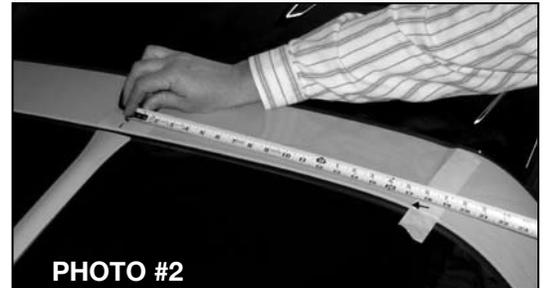


PHOTO #2



PHOTO #3

4. Place a piece of masking tape at bottom approximate center of rear body panel. Place this masking tape on painted body and glass (SEE PHOTO #3). Take measurement from deck lid gap on right to deck lid gap on left to find and mark center on tape (SEE PHOTO #4).
5. With red liner still on tape, place the longer exterior trim on rear window to get positioning. NOTE: the top of trim piece (wider end) should be located about 1/16" over edge of glass. The lower end of trim should be about 1" from rear painted body panel.

6. Remove red liner to expose tape surface. Starting at top with trim 1/16" over glass and centered, lightly lay down trim on window surface. Continue placing the trim down onto glass so that trim lays down and is centered on bottom. If trim is centered then press down firmly onto painted trim to activate the 3M VHB tapes adhesive.



PHOTO #4



PHOTO #5

7. Open and lift deck lid. For best results, one person should get into back of Corvette to install interior trim piece. The interior trim piece is slightly narrower than exterior piece. With red tape liner still on interior trim, position trim in place. NOTE: the trim piece fits between headliner on top and interior panel on bottom. Location of interior trim piece is directly under exterior trim. Remove red tape liner and carefully and lightly place trim on glass. If not positioned correctly pull off and reposition (SEE PHOTO #5).