



ALTEC PRODUCTS INC.
14050 Lincoln St. NE
Suite 200
Ham Lake, MN 55304
(763) 785-9035
Fax (763) 785-9084
www.altecproducts.com

05-ON REAR CORVETTE LICENSE FRAME

PATENT PENDING

INSTALLATION INSTRUCTIONS



PHOTO 1

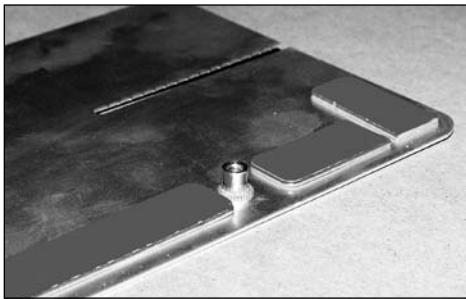


PHOTO 2

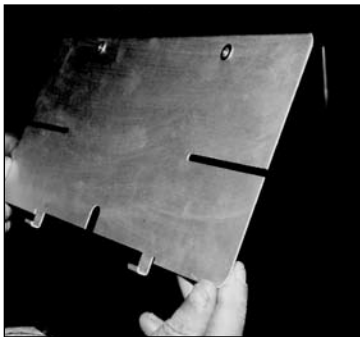


PHOTO 3



PHOTO 4

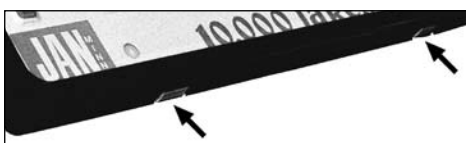


PHOTO 5

Instructions are for license frame without LED light kit.

- 1.** Remove rear license plate.
- 2.** Remove (2) white plastic OEM license plate mounting retainers to expose square holes. Remove 2 black rubber lower cushions (See Photo 1).
- 3.** Important: thoroughly clean entire surface with warm soapy water. Dry completely and clean again using glass cleaner. Do not touch surface after cleaning. The rear panel where aluminum back plate will mount should now be dirt and wax free.
- 4.** Note the backside of aluminum backplate. The threaded nut inserts extend out past tape. The (2) nut inserts will go into the square holes where white OEM retainers were removed (See Photo 2). Before removing red tape liner, align aluminum back plate in position with nut inserts in square holes. You will notice a slight adjustment that can be made up or down and centered left to right. When you install permanently, the aluminum backplate should be installed up tight to the top of the square holes and centered left to right.
- 5.** Remove red liner from tape. Carefully hold tape off from rear body when aligning nut inserts into square holes. Position nut inserts into square holes and adjust up and center. Press aluminum back plate down and secure by applying pressure on area where tape is contacting car body (See Photo 3).
- 6.** Place license plate in position using aluminum formed tabs on backplate to support (See Photo 4). Place painted rear license frame into position. Note that aluminum formed tabs will fit into opened slots in bottom of painted license plate frame (See Photo 5). Square up license plate and align holes in license plate, license plate frame and nut inserts. Install stainless steel washers and machine screws into nut inserts and tighten with supplied Allen wrench.

CONTENT LIST:

- Qty (1) Painted rear license plate frame
- Qty (1) Aluminum Back plate
- Qty (1) Allen wrench
- Qty (2) Stainless steel washers
- Qty (2) Stainless steel machine screws

Visit our website at www.altecproducts.com
for more Corvette accessories.

DESIGNERS AND MANUFACTURERS
OF QUALITY AUTOMOTIVE ACCESSORIES.