



ALTEC PRODUCTS INC.
14050 Lincoln St. NE
Suite 200
Ham Lake, MN 55304
(763) 785-9035
Fax (763) 785-9084

97-04 CORVETTE

Custom-Fit Splash Guard Installation Instructions

Altec's Custom-Fit Splash Guards are designed exclusively for your 97-04 Corvette.

STEP 1



Install mounting tabs on each guard using (2) 3/8" phillips machine screws and (2) kep nuts. Bend tab so it will lie flat on lower fender surface.

STEP 2 FRONT GUARDS:



Hold guard up to fender in position. Note: masking tape should be applied for marking holes to drill. Apply tape to fender well. Holding guard in a perfect level position, mark through holes in guard onto tape. A helper can assist in aligning per diagram A.


STEP 3

Drill with a 9/64" bit (3) locations, 2 in fender well and 1 for lower bracket that lies flat against lower body. Remove masking tape. Install supplied (3) mounting screws. Make sure the guard edge fits flush with painted surface so not to rub paint.

STEP 4 REAR GUARDS:

Remove rear wheel. Repeat step 2 using tape and marking holes for drilling. Install supplied (3) mounting screws and flat nuts. Reaching up from under the body, hold flat nut behind the body panel so mounting screw will pull tight. A helper can assist in aligning per diagram A.

DIAGRAM A

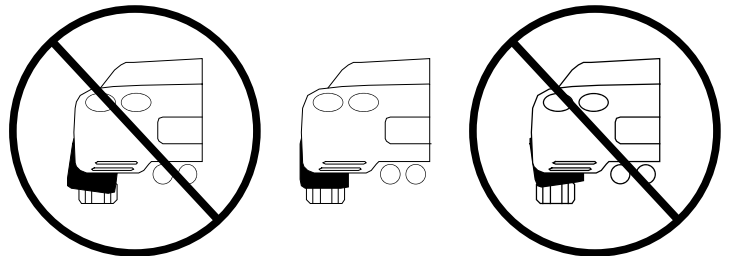

Installation is simple, however, for best results have a helper assist in aligning guards and drilling holes.