



ALTEC PRODUCTS INC.

14050 Lincoln St. NE

Suite 200

Ham Lake, MN 55304

(763) 785-9035

Fax (763) 785-9084

www.altecproducts.com

HUMMER REAR H2 SPLASH GUARDS

INSTALLATION INSTRUCTIONS

Our rear HUMMER guards are packaged 1 side per box. Included in the driver side box you will find the mounting hardware for the driver guard and short wire loom that connects the (2) splash guards to the HUMMER factory wiring. In the passenger side box you will find mounting hardware for the passenger side, wire connectors and plastic cable ties.

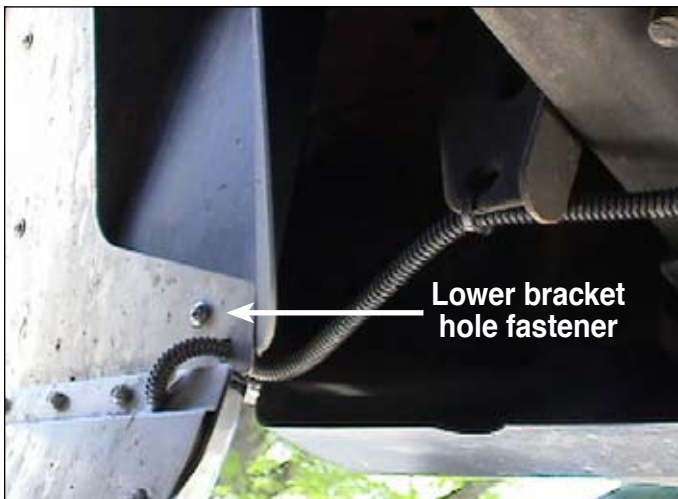


PHOTO 1



PHOTO 2

Directions:

- 1.** Hold passenger side splash guard up in place. The top (2) holes in the stainless steel line up with (2) factory fender well fasteners. Remove these (2) fasteners and reinstall to mount stainless steel splash guard to HUMMER.
- 2.** Installing supplied bracket to HUMMER. (NOTE) Lower unused hole in stainless splash guard will be used for attaching supplied bracket to HUMMER. Remove lower factory phillips screw. This phillips screw is holding bottom edge of plastic fender liner to HUMMER body. Position bracket so bracket is behind stainless steel splash guard. Use supplied 1/2 x 20 x 1/2 stainless steel phillips machine screw and keps nut. Reinstall lower factory phillips screw through bracket, fender liner, and into HUMMER body. (See photo 1)
- 3.** Route wire loom up and out of the way. The wire loom should follow across the back of HUMMER over toward the driver side.
- 4.** Installing driver side splash guard. Follow directions as given for passenger side. Route shorter wire loom coming out of driver splash guard out of the way over to passenger loom. (See photo 2)