


Installation Instructions for Altec 97-04 Corvette Sill Protectors

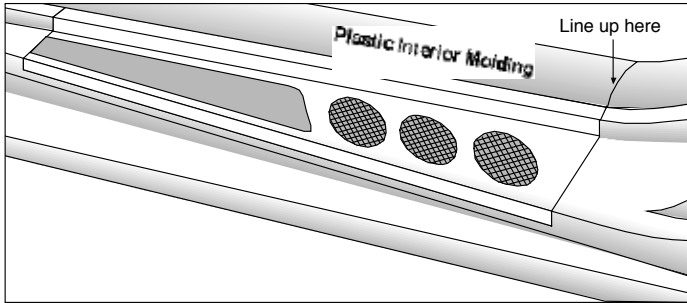

1. Before removing double back tape, position Sill Protector on door sill.
2. Position Sill Protector so that back edge lines up with seam in plastic interior molding. (See drawing)
3. Lift of Sill Protector and peel off double back liner from tape.
4. Position Sill Protector in correct placement and push down into place.



ALTEC PRODUCTS INC.

14050 Lincoln St. NE
Suite 200
Ham Lake, MN 55304
(763) 785-9035
Fax (763) 785-9084

IMPORTANT: Thoroughly clean the door sill surface before installing. Use glass cleaner such that no dust or oily film exists. Do not touch surface after cleaning.

**Contact your Corvette Accessory Dealer for
Taillight Grills and Rear Phantom License Plate Frames.**

- Visit our website at www.altecproducts.com for more Corvette accessories •

DESIGNERS AND MANUFACTURERS OF QUALITY AUTOMOTIVE ACCESSORIES.