




Installation Instructions For C6 & C7 Corvettes And other rear frame applications



1.) With the frame facing down, lay the license plate on the frame so the mounting holes align.

2.) Lay the aluminum backing plate on the license plate while hooking the “J” tabs into the recesses on the bottom of the frame.

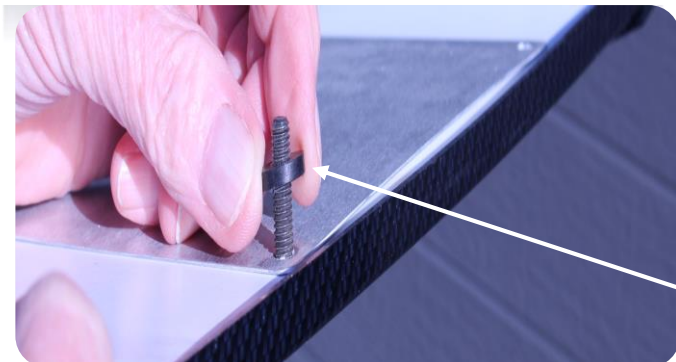

3.) Push the mounting screw up through the frame mounting holes and aluminum plate.

4.) Now push the plastic spacer on to the mounting screw



5.) Use the allen wrench provided to drive the screw into the existing nylon mounting inserts.

Only tighten to a snug fit.



Altec Products

14050 Lincoln NE
Ham Lake MN 55304
763 785 9035

***Visit AltecProducts.com for
Distinctive Accessories***