



2020-ON CORVETTE C8 CUSTOM FIT SPLASH GUARDS INSTALLATION INSTRUCTIONS

STEP 1 (FRONT GUARDS):



- INSTALL MOUNTING TABS ON EACH GUARD USING (1) 3/8" PHILLIPS MACHINE SCREW AND (1) KEP NUT.
- BEND TAB AS SHOWN IN PICTURE ABOVE.

STEP 2 (FRONT GUARDS):

NOTE: MAKE SURE YOU HAVE ANOTHER INDIVIDUAL HELP YOU INSTALL THE GUARDS.

- HOLD THE GUARD UP TO FENDER IN POSITION (REFER TO DIAGRAM A FOR ASSISTANCE). IT IS BEST TO PLACE A SMALL AMOUNT OF MASKING TAPE ON THE FENDER WALL IN THE LOCATION WHERE THE HOLES IN THE GUARD LINE UP CORRECTLY.
- MARK THE DRILL HOLES WITH A PEN OR PENCIL (MAKE SURE THE GUARD IS CORRECTLY LINED UP BEFORE MARKING HOLE, AGAIN REFER TO DIAGRAM A)


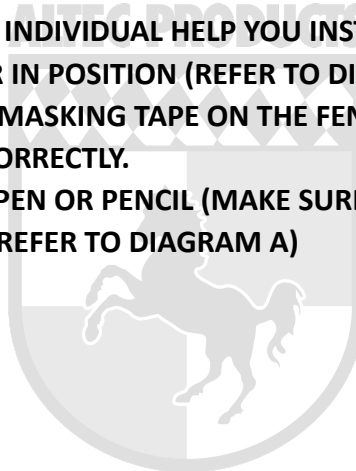


DIAGRAM A

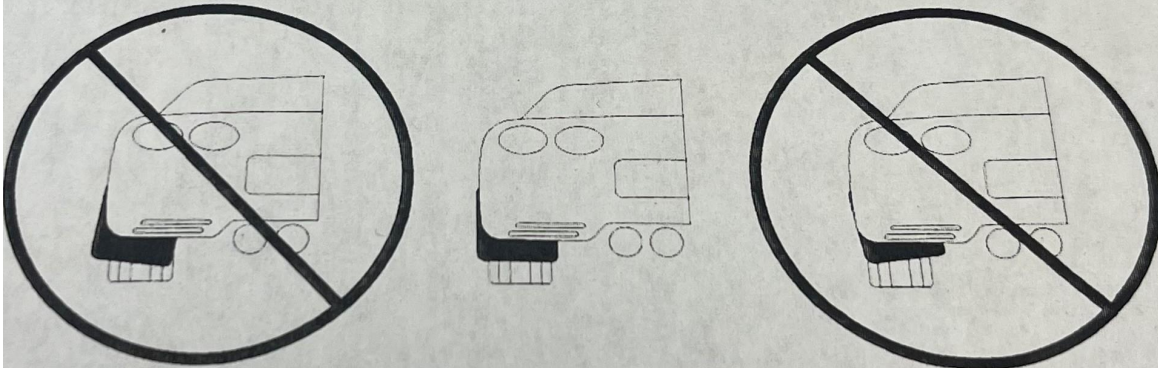

STEP 3 (FRONT GUARDS):

- DRILL WITH A 9/64" BIT (2) LOCATIONS IN FENDER WELL WHERE YOU HAVE MARKED IN STEP 2.
- HOLD THE GUARD UP AND INSTALL (2) #12 X 1" PHILLIPS TRUSS TAPPING SCREWS.
- NOTE:DO NOT TIGHTEN THESE SCREWS ALL THE WAY.

STEP 4 (FRONT GUARDS):



- REMOVE FACTORY SCREW IN LOWER BODY (PLEASE SEE ABOVE PICTURE FOR REFERENCE).
- BEND THE BRACKET ON THE GUARD ACCORDINGLY TO LAY FLUSH ONTO THE LOWER BODY OF THE CAR.
- ONCE YOU ARE LINED UP PROPERLY, REINSTALL THE FACTORY SCREW.
- TIGHTEN ALL FASTENERS.

ALTEC PRODUCTS

