



ALTEC PRODUCTS INC.
10317 Liberty, LN
Chisago City, MN 55013
763-785-9035
Fax 763-785-9084
www.ALTECPRODUCTS.com

C6 CORVETTE REAR AERO DIFFUSERS

Installation Instructions


The C6 Rear Aero Diffusers can be installed by anyone with reasonable skills. No tools are needed. For best results and fit, position diffusers as far forward (toward front of car) in the template as possible.



STEP 1. Using supplied mounting templates attach Driver side template (marked D) onto rear lower body panel. The (2) holes in template will locate on the (2) plastic round push-in style fasteners located in lower body panel. Line up top edge of template with lens opening. Use masking tape to hold template in place. SEE PHOTO 1

STEP 2. Important : Before removing the red liner from 3M tape practice fitting Diffuser into place so you will have an idea how to align and easily position the Diffuser in template cut-out area. Using (1) supplied 3M Adhesive Primer crush on dot as instructed and brush primer solvent onto both cut-outs in template for (2) Diffusers. SEE PHOTO 2

Important: Adhesive promoter is not needed in narrow cut-out area of template. The Diffusers tape does not contact body panel in this area and the Diffuser fins actually float off surface of body panel.

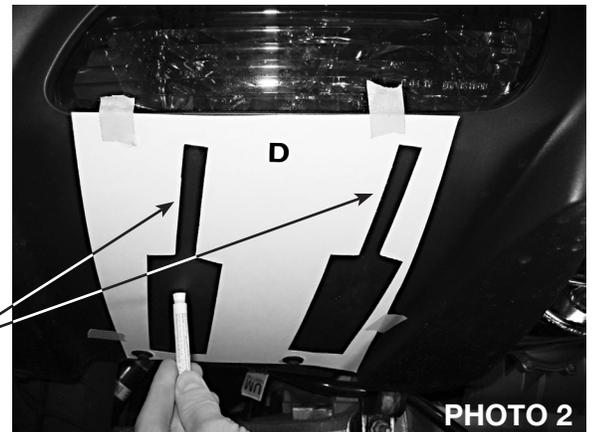

STEP 3. Remove red liner from tape on (1) Diffuser. Start by locating Diffuser for positioning as far forward (toward front of car) as possible. The overall fit is best when Diffusers are mounted as forward as possible into die cut template. SEE PHOTO 3 As you position Diffusers make sure they locate correctly into template centered in narrow fin area.

STEP 4. Push up on Diffuser to make good tape contact, You can reach up behind the lower body panel and support the panel as you apply pressure when you push up on Diffuser to get good tape contact. SEE PHOTO 4

STEP 5. Follow these steps for completing the Passenger side. Then remove both templates



Components are warranted for 30 days from initial sale to be free of manufacturing defects. Defective components should be returned to place of purchase for replacement.

Visit www.altecproducts.com for more Corvette accessories.