



**Display Position**



**Transitioning**



**Stowed Position**

**Overview** The Show & Go license frame can be quickly and easily moved from a display to a stowed position with a simple hand motion. Installation is fast and easy. The custom mounting bracket for the C7 bolts on, using existing fasteners. Drilling of only one hole is required to support the rear of the assembly.

### Installation steps


1. Drive the front wheels up on ramps, or jack up one front side for working clearance. Always chock wheels and use safety jack stands.



2. Use existing screws to mount the aluminum bracket supplied. The two center holes go forward towards the front, as shown.



3. Trial mount the frame to the bracket using the two 1/4" long screws. Then drill a pilot hole in the center slot as shown. Remove the frame and drill a 5/16" hole. Push in the rubber well nut, Then, reinstall the base with the two front screws, but do not tighten them yet.

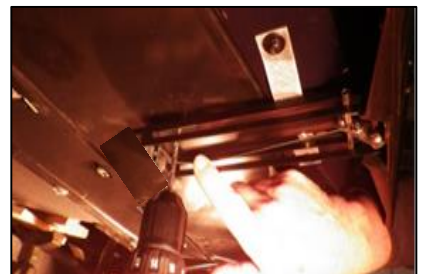

4. Place the 1/2" OD plastic spacer between the frame and rubber nut. Thread the 5/8" long screw up into the well nut.



5. Tighten the two front screws,

6. Place the foam pads on the back side of the license plate mount in the locations where it touches the front spoiler surface

**Warranty** Workmanship and materials are warranted for 60 days from the original date of sale. Damage resulting from ground strikes are not covered by warranty. Return a defective part to Altec Products, postage paid, to receive a replacement under this warranty policy.

**Caution:** The plate must be in the display position when required by law.



**Altec Products**  
10317 Liberty Ln. Ste B  
Chisago City, MN 55013  
763 785 9035

Visit [www.AltecProducts.com](http://www.AltecProducts.com) to see the powered Show-N-Go and more Corvette Accessories

**PN 400SR**

1/10/2024