



INSTALLATION INSTRUCTIONS
CORVETTE C8 FRONT SPLASH GUARDS
SKU- 295-160

Step One

Install the Clips on all the tabs on the inside of the splash guards.




Step Two

Remove the T20 torx bolt from the lower part of the splash guard.



Step Three

Pull on the stock Splash Guard till the retention clips release from the wheel well. Then fully remove.

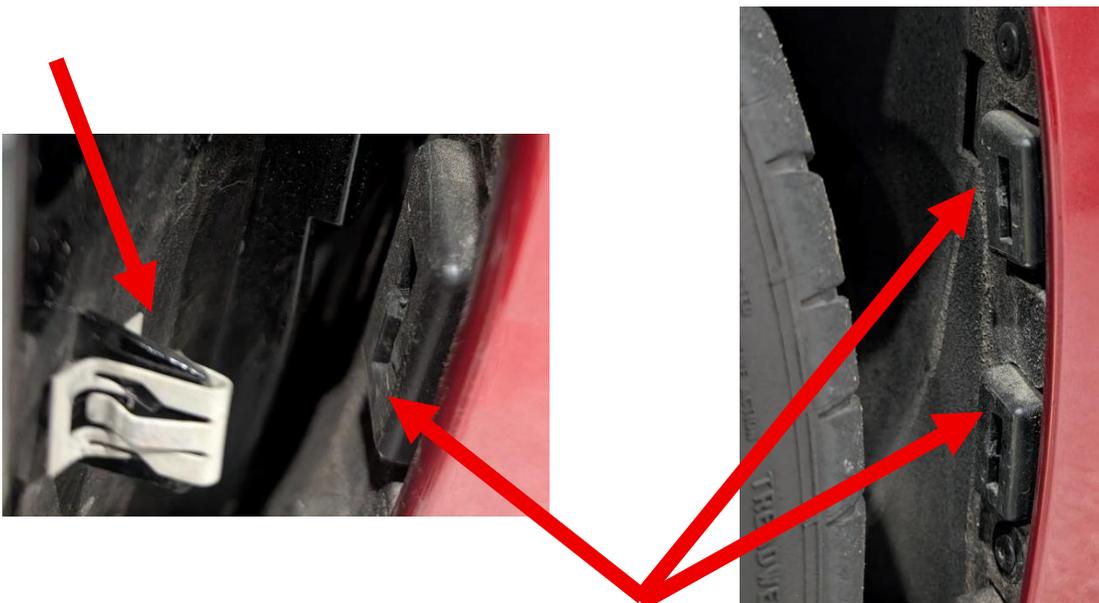



INSTALLATION INSTRUCTIONS
CORVETTE C8 FRONT SPLASH GUARDS
SKU- 295-160



Part #	Quantity	Descriptions	In Box
295-Color Code			
	1	Left Splash Guard	
	1	Right Splash Guard	
	1	Bag of 8 Retention Clips	
	1	Instructions	





INSTALLATION INSTRUCTIONS
CORVETTE C8 REAR SPLASH GUARDS
SKU- 296-160

Step One
Install the Clips on all the tabs on the inside of the splash guards.



Step Two
Remove the T20 torx bolt from the lower part of the splash guard.



Step Three
Pull on the stock Splash Guard till the retention clips release from the wheel well. Then fully remove.





INSTALLATION INSTRUCTIONS
CORVETTE C8 FRONT SPLASH GUARDS
SKU- 296-160



Part #	Quantity	Descriptions	In Box
296-Color Code			
	1	Left Splash Guard	
	1	Right Splash Guard	
	1	Bag of 8 Retention Clips	
	1	Instructions	

