



INSTALLATION INSTRUCTIONS
CORVETTE C8 BLACK OUT COVERS
SKU- 4150-100

Step One

Thoroughly clean the Corvette C8 factory taillights and ensure the Altec blackout covers are completely free of dirt, debris, and residue prior to installation.


Step Two

Test-fit the covers to ensure proper alignment and fit before proceeding with installation or applying the adhesive. Once the adhesive tape has been applied, placement must be precise, as adjustments will be limited





Step Three

Apply the adhesive tape to the back side of the blackout light covers as illustrated in the image below. Ensure the adhesive tape is applied cleanly and consistently along the entire perimeter edge. Proper placement is critical, as precise alignment is required during installation of the cover.

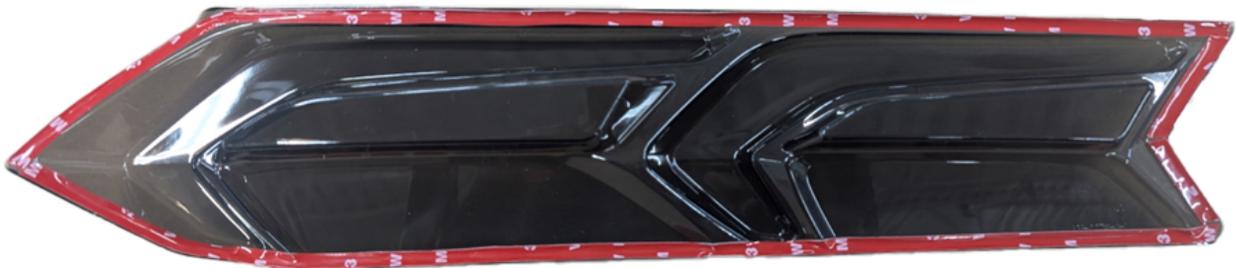

Step Four - Optional

Installation of the small triangle reflector on the side of the car. Simply apply the double-sided tap to the stock reflector on all 3 sides and stick the black out triangle over the lens.

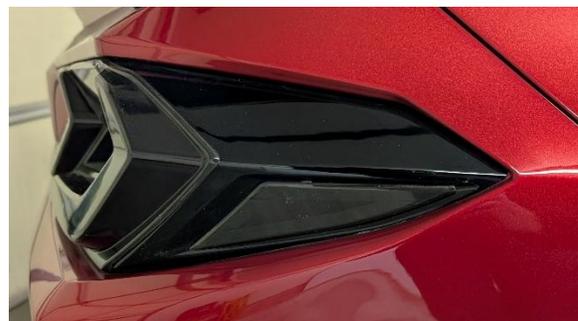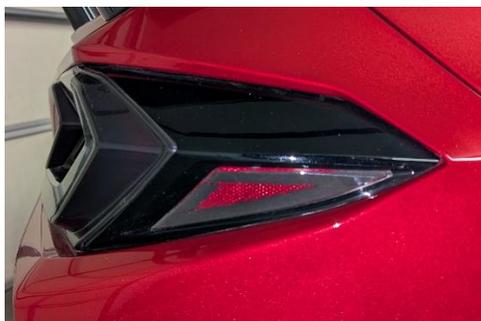



INSTALLATION INSTRUCTIONS
CORVETTE C8 BLACK OUT COVERS
SKU- 4150-100



PARTS SHOWN INCLUDED IN
THE BLACK OUT COVERS KIT

Part #	Quantity	Descriptions	In Box
4150-100			
	1	Left Black Out Cover	
	1	Right Black Out Cover	
	2	Rolls of Double-Sided Tape	
	2	Side Triangle Covers	
	1	Instruction / Online	

