



**INSTALLATION INSTRUCTIONS**  
**CORVETTE C8 REAR DIFFUSER**  
**SKU- 5150-160**

**Step One**

Thoroughly clean the Corvette C8 factory rear mounting areas of the new diffuser to ensure they are completely free of dirt, debris, and residue prior to installation.

**Step Two**

Test-fit the cover to ensure proper alignment and fit before proceeding with installation or applying the adhesive. Once the adhesive tape has been applied, placement must be precise, as adjustments will be limited



**Step Three**

Apply the adhesive tape to the back side of the diffuser cover as shown in the image below. Ensure the tape is applied evenly and continuously along the entire perimeter highlighted in red. Proper and consistent placement is essential, as accurate alignment will be required during installation of the cover.

The first image illustrates the inside of the diffuser, and the second image shows the outside of the diffuser for reference.






**INSTALLATION INSTRUCTIONS**  
**CORVETTE C8 REAR DIFFUSER**  
**SKU- 5150-160**



**Step Four**

Position the rear diffuser in place and ensure it is properly aligned. Once aligned, drill out the two outer mounting locations and secure the diffuser using the supplied push-in retainers. The arrows below indicate the mounting points on the driver's side. Repeat this procedure on the passenger side.

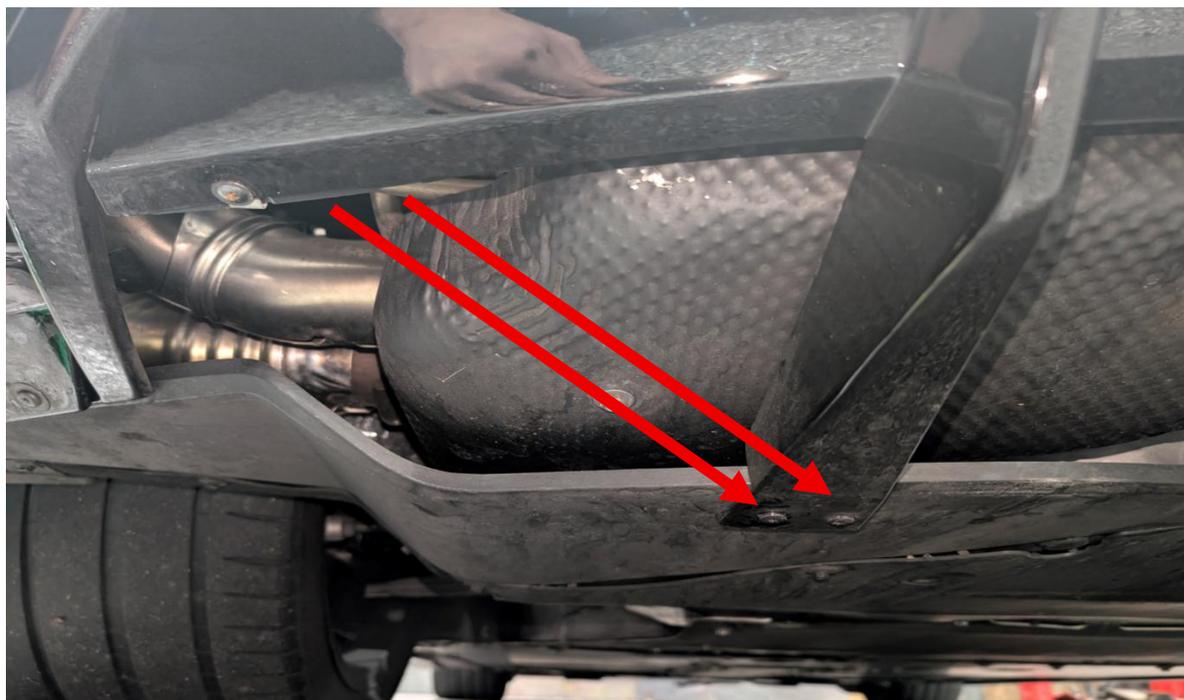

<b>Part #</b>	<b>Quantity</b>	<b>Descriptions</b>	<b>In Box</b>
<b>21103</b>	<b>4</b>	<b>Push-In Retainers</b>	
<b>5150-100</b>	<b>1</b>	<b>Rear Diffuser Cover</b>	
	<b>1</b>	<b>Roll of Tape</b>	
	<b>1</b>	<b>Instruction</b>	