



**INSTALLATION INSTRUCTIONS**  
**CORVETTE C8 REAR CORNER DIFFUSERS**  
**SKU 5190-160**

**Step One**

Thoroughly clean the Corvette C8 factory rear mounting areas for the new diffusers to ensure they are completely free of dirt, debris, and residue prior to installation.

**Step Two**

Remove the two rear corner bolts from the vehicle. Position the corner diffuser and install the two supplied screws loosely to ensure proper alignment. Do not fully tighten the screws at this stage, as this is just a Test-fit for the covers to ensure proper alignment and fit before proceeding with installation or applying the adhesive. Once the adhesive tape has been applied, placement must be precise, as adjustments will be limited. Install adhesive tape as shown.






**INSTALLATION INSTRUCTIONS**  
**CORVETTE C8 REAR CORNER DIFFUSERS**  
**SKU 5190-160**

**Step Three**

Once alignment is verified, remove the adhesive tape backer and firmly press the tape into place to secure the diffuser. After the tape has been properly set, fully tighten the two screws

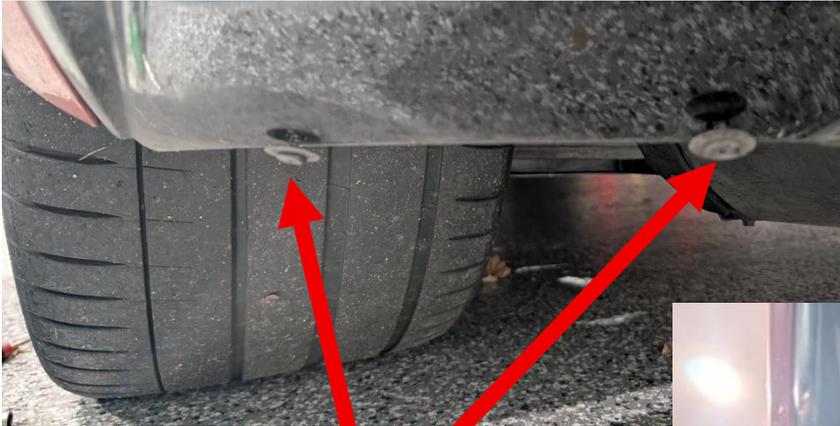

**Step 2**

These are the 2 screws that need to be removed. Install into the rear diffusers to install.

**Step 3**

Re-Install the screws into the rear of the car.



Part #	Quantity	Descriptions	In Box
S-4349	1	Shipping Box	
5150-100	1	Left Rear Corner Diffuser	
	1	Right Rear Corner Diffuser	
	1	Roll of Adhesive Tape	

